


NZ 71/24 NEW ZEALAND - South Island - East Coast - Akaroa Harbour. Anchorages

1. Chart NZ 6324 [046/24]

Insert		43°48'.54S., 172°56'.56E.
		43°48'.39S., 172°57'.02E.
Delete		43°49'.80S., 172°55'.68E.
		43°49'.36S., 172°56'.14E.
		43°48'.30S., 172°56'.10E.
		43°48'.74S., 172°55'.83E.

2. Chart NZ 6324 (plan, French Bay) [046/24]

Insert		43°48'.54S., 172°56'.58E.
		43°48'.39S., 172°57'.02E.